SERIES 519 — Transfer Stands

 Transfer Stands are designed for comparison measurements of size using a dial indicator or Digimatic Indicator.



SPECIFICATIONS


Wetric					
	Code No.	Anvil	Clamping range	Micromotion adjustment	Stem hole
٠,	oue No.		on column (mm)	range (mm)	(mm)
519	9-109-10	With a serrated anvil (ø58 mm)	0 to 320	1	ø0.375 in, ø8 with Bush

Note 1: Perpendicularity of the stem hole to the anvil is better than 0.4 mm/100 mm.

Note 2: Take note that when mounting high-accuracy Linear Gages (with resolution of 0.1 µm or better) to these stands, accuracy may be affected depending on the perpendicularity of the mounting hole to the top surface of the anvil (cosine effect).

Note 3: Compact dial indicators (bezel ø31, ø36) are not suitable for use with these stands.

DIMENSIONS

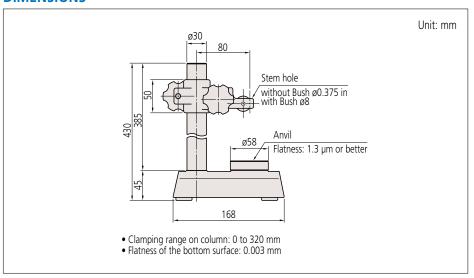

Optional Accessories

101462: Hardened steel serrated anvil (standard accessory)

Unit: mm



