
Quick Guide to Precision | Measuring Instruments



Dial Gages and Digital Indicators



Setting the origin of a Digimatic indicator

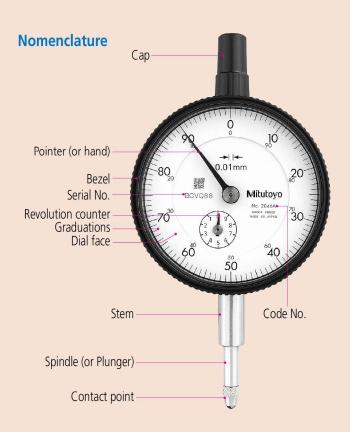

The accuracy specification in the range of 0.2 mm from the end of the stroke is not guaranteed for Digimatic indicators. When setting the zero point or presetting a specific value, be sure to lift the spindle at least 0.2 mm from the end of the stroke.

Notes on using a dial indicator or Digimatic indicator


- Do not lubricate the spindle. Doing so might cause dust to accumulate, resulting in a malfunction.
- If the spindle movement is poor, wipe the upper and lower spindle surfaces with a dry or alcohol-soaked cloth. If the movement is not improved by cleaning, contact Mitutoyo for repair.
- Before making a measurement or calibration, confirm if the spindle moves upward and downward smoothly, and stability of the zero point.

Mounting a Dial gage

Stem mounting	Method	Clamping the stem directly with a screw	Clamping the stem by split-clamp fastening
	Note	 Mounting hole tolerance: ø8 G7 (+0.005 to 0.02) Clamping screw: M4 to M6 Clamping position: 8 mm or more from the lower edge of the stem Maximum clamping torque: 150 N·cm when clamping with a single M5 screw Note that excessive clamping torque may adversely affect spindle movement. 	• Mounting hole tolerance: ø8 G7 (+0.005 to 0.02)
Lug mounting	Method	M6 scre Plain wa	_
	Note	 Lugs can be changed 90° in orientation according to the application. (The lug i Lugs of some SERIES 1 models (1911A-10, 1913A-10 and 1003A), however, To avoid cosine effect error, ensure that any type of gage or indicator is mount 	s set horizontally when shipped.) cannot be altered to horizontal. ed with its spindle in line with the intended measurement direction.

Contact point

- Screw thread is standardized on M2.5×0.45 (Length: 5 mm).
- Incomplete thread section at the root of the screw shall be less than 0.7 mm when fabricating a contact point.





Measuring orientation

ivicasuring orientation	
Orientation	Remarks
Vertical (contact point downward)	7.
Lateral (spindle horizontal)	If measurement is performed in the lateral orientation, or upside-down orientation, the measuring force is less than in the vertical orientation. In this case
Upside-down (contact point upward)	be sure to check the operation and repeatability of the indicator. For guaranteed-operation specifications according to the operating orientation refer to the specific product descriptions in the catalog.

Dial Indicator Standard JIS B 7503: 2017 (Extract from JIS/Japanese Industrial Standards)

	Item	Model	Measuring method (zero-point fixed)	Evaluation method (performance evaluation by moving the zero point)	Measurement examples
	Indication error over the entire measuring range	indicator and multi-	Set the dial indicator on the supporting stand, and read the indication error*1 of the next point while gradually retracting the spindle.	Obtain the difference between the maximum and the minimum values of indication error of all measurement points in both retract and extend directions.	
Indication	1/10 revolution indication error	revolution dial indicator	- Every 1/10 revolution for the first two revolutions* ² - Every half revolution from two to five	During the first two revolutions in both retract and extend directions, obtain the maximum difference of the indication error among the adjacent measurement points per 1/10 revolutions*3.	Dial indicator
error	1/2 revolution indication error	Multi-revolution	revolutions - Every revolution from five to ten revolutions - Every five revolutions from 10 to 50 revolutions	During the first five revolutions in both retract and extend directions, obtain the maximum difference of the maximum and the minimum indication errors over the measuring range per 1/2 revolutions.	Supporting stand Micrometer head or other length measuring unit
	1 revolution indication error	dial indicator	- Every ten revolutions after 50 revolutions Next, after retracting the spindle for more than three graduations of the long hand, extend the spindle gradually and read the	During the first ten revolutions in both retract and extend directions, obtain the maximum difference of the maximum and the minimum indication errors over the measuring range per one revolution.	Institution in a superiori
Retrace e	rror	One-revolution dial indicator and multi-revolution dial indicator	extend the spindle gradually and read the indication error at the same measurement point in the retract direction.	Obtain the maximum difference of all the measuring points in reference to the indication error at the same measuring point in both forward and backward directions.	
Repeatab	ility		Set the dial indicator on the supporting stand, retract the spindle at a desired position within the measuring range. Then, extend the spindle quickly and slowly five times and read each value.	Obtain the maximum difference among five indication values.	Dial indicator Supporting stand Measuring stage (Gauge block)
Measurin	One-revolution dial indicator and multi-revolution dial indicator		Set the dial indicator on the supporting stand, retract and extend the spindle continuously and gradually, and read the measuring force at the zero and end points.	Obtain the maximum measuring force, the minimum measuring force, and the difference of the measuring force in both retract and extend directions at the same measurement point.	Dial indicator Supporting stand Top pan type spring scale or force gage

^{*1} For how to read the indication error, either read the input quantity of the measuring instrument aligning the long hand to the graduation, or read the indication value of the dial indicator according to the moving amount of the measuring instrument.

*2 With the one-revolution dial indicator, read the indication error per 10 graduations.

*3 With the one-revolution dial indicator, obtain the maximum difference of the indication error in the interval of adjacent 10 graduations.

Maximum permissible error

(Unit: µm)

	1																		
		Maximum permissible error (MPE) by measurement characteristics - dial indicators with bezel dia. 50 mm or larger									Maximum permissible error (MPE) by measurement characteristics - dial indicators with bezel dia. 50 mm or smaller and Back Plunger type dial indicators								
Graduation (mm)				(0.01			0.005 0.001					0.01				0.005	0.002	0.001
Measuring range (mm)	1 or	Over 1 and	Over 3 and	Over 5 and				Over 50 and	5 or	1 or	Over 1 and	Over 2 and	1 or	Over 1 and	Over 3 and	Over 5 and	5 or	1 or	1 or
ivicasuring range (min)	less	up to 3	up to 5	up to 10	up to 20	up to 30	up to 50	up to 100	less	less	up to 2	up to 5	less	up to 3	up to 5	up to 10	less	less	less
Retrace error	3	3	3	3	5	7	8	9	3	2	2	3	4	4	4	5	3.5	2.5	2
Repeatability	3	3	3	3	4	5	5	5	თ	0.5	0.5	1	3	3	3	3	3	1	1
Arbitrary 1/10 revolution	5	5	5	5	8	10	10	12	5	2	2	3.5	8	8	8	9	6	2.5	2.5
Arbitrary 1/2 revolution	8	8	9	9	10	12	12	17	9	3.5	4	5	11	11	12	12	9	4.5	4
রি Arbitrary One revolution	8	9	10	10	15	15	15	20	10	4	5	6	12	12	14	14	10	5	4.5
Entire measuring range	8	10	12	15	25	30	40	50	12	5	7	10	15	16	18	20	12	6	5

Note 1: The maximum permissible error (MPE) for one-revolution dial indicators does not specify the indication error of an arbitrary 1/2 and 1 revolution.

Note 2: The MPE represents the value at 20 °C, which JIS B 0680 defines as the standard temperature.

Note 3: The measurement characteristics of a dial indicator have to meet both maximum permissible error (MPE) and measurement force permissible limits (MPL) at any position within the measuring range in any posture when the measurement characteristics are not specified by the manufacturer.



Mitutoyo's Response to Dial Indicator Standard JIS B 7503: 2017

- We guarantee the accuracy of completed products by inspecting them in the vertical posture. Standard-attached inspection certificate includes inspection data.
- We issue paid-for calibration results for horizontal or opposite posture if required.
- It is said that, for evaluation of the compatibility to the specifications, JIS B 0641-1 or the criteria where the internationally-recognized specification range and the OK range are equal shall be applied. Also, it is said that the uncertainty is preferred to be evaluated based on ISO 14253-2 and ISO/IEC Guide 98-3. Therefore, we perform shipping inspection of dial indicators inclusive of the uncertainty of calibration as in the past.

Electronic digital-indicator gage Standard JIS B 7563: 2021 (Extract from JIS/Japanese Industrial Standards)

	ltem	Measuring method (zero-point fixed)	Evaluation method (performance evaluation by moving the zero point)	Measurement examples		
	Partial measuring range PMPE	Set the digital indicator gage on the support. Gradually retract the contact point and read indication errors at the measurement points. Next, press the contact point until it comes to 0.1 mm or more	Obtain the difference between the maximum and minimum indication errors at measurement points in the retracting direction in a partial measuring range.	Digital Indicator Gage		
Maximum permissible error	Total measuring range	above the end point. Then, gradually advance the contact point and measure indication errors at the same measurement points as when the probe was retracted. a) For a partial measuring range, six or more measurement points including the start point (evenly spaced whenever possible) are required within the range from the start point to the point of 50 times the minimum resolution. b) For a full measuring range, 11 or more measurement points including the start point and the end point (evenly spaced	Obtain the difference between the maximum and minimum indication errors at measurement points in the retracting direction in a full measuring range. a) Measurement points in the retracting direction in a full measuring range include those in a partial measuring range.	Supporting stand Reference standar (Micrometer head or other length measuring unit)		
M	Hysteresis H _{MPE}	whenever possible) are required. c) To read the indication errors, it is possible to read either the input on the measuring instrument corresponding to the digital value or the digital value corresponding to the movement amount on the measuring instrument.	Obtain the maximum difference among the indication errors at the same measurement points between the retracting and advancing directions in partial and full measuring ranges.			
Re RM	peatability PE	Set the digital indicator gage on the support. Press the contact point until it comes to a desired point within the measuring range and then make it operate in the advancing direction five times. Check operation by moving the contact point both rapidly and slowly and read the displayed values.	Obtain the maximum difference of the five measured values.	Supporting stand Measuring stage (Gauge block)		
M	easuring force PL	Set the digimatic indicator on the supporting stand, retract and extend the spindle continuously and gradually, and read the measuring force at the zero and end points.	Obtain the maximum measuring force, the minimum measuring force, and the difference of the measuring force in both retract and extend directions at the same measurement point.	Supporting stand Top pan type spring scale or force gage		

Electronic digital-indicator gage maximum permissible error (MPE)


	The second of th												
Item	Resolution (mm)		0.01				0.0	001		0.0005			
	Partial measuring range (mm)		0	.5		0.05				0.025			
Characteristic	Measuring range (mm)	15 or less	Over 15, up to 30	Over 30, up to 60	Over 60, up to 100	15 or less	Over 15, up to 30	Over 30, up to 60	Over 60, up to 100	15 or less	Over 15, up to 30	Over 30, up to 60	Over 60, up to 100
Part	ial measuring range PMPE (µm)	2	0	40		1.5	3	5		3		ī	5
Tota	Il measuring range Емре (µm)	20		40		3		5		3		5	
Hys	teresis Hmpe (µm)	20			3				3				
Rep	eatability <i>R</i> мре (µm)	20			2				2				

Mitutoyo's Response to Electronic digital-indicator gage Standard JIS B 7563: 2021

- We guarantee the accuracy of completed products by inspecting them in the vertical posture. Standard-attached inspection certificate includes inspection data.
- We issue paid-for calibration results for horizontal or opposite posture if required.
- It is stated that "JIS B 0641-1 should be applied to verification of conformity/ nonconformity to the specifications. ISO 14253-2 and ISO/IEC Guide 98-3 should be applied to evaluation of uncertainty whenever possible." Therefore, using the specification range as the conforming range is accepted when the value satisfies specific conditions that are determined by taking into account uncertainty. The above said internationally recognized acceptance criterion is ISO/TR 14253-6: 2012 (Fig. 1).

Fig. 1 Maximum Permissible Error MPE

JIS B 7563: 2021(JIS B 0641-1)

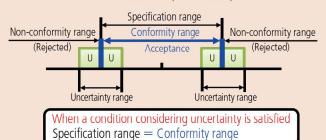



Dial Test Indicator (Lever Type) Standard JIS B 7533: 2015 (Extract from JIS/Japanese Industrial Standards)


No	Item.	Measuring method	Measuring point	Evaluation method	Diagram
1	over a range of	Holding the dial test indicator (lever type), define the reference point at near the contact point resting point where the indication and		Obtain the difference between the maximum and the minimum values of indication error of all measurement points in the forward direction.	
2	10 scale divisions	error of indication is set zero. Then, move the contact point in the forward direction and read the error of indication at each measuring point. Next, after moving the contact point for more	Per 10 graduations in the forward	In the forward direction from the reference point to the end point, obtain the maximum difference of the indication error among the adjacent measurement points per 10 graduations.	Dial test indicator (lever type) Supporting stand
3	over a range of	than three graduations from the end of the measuring range, move the contact point in the backward direction and read the error of indication at the same measurement point in the forward direction. (The forward direction is the direction against	and backward direction from the reference point to the end point.	In the forward direction from the reference point to the end point, obtain the maximum difference of the maximum and the minimum indication errors to be read by the zero-point fixed method over the measuring range per 1 revolution.	Micrometer head or length measuring unit
4	Hysteresis	the measuring force to the contact point of the lever-operated dial indicator; the backward direction is the measuring force applied direction.)		Obtain the maximum difference in reference to the indication error at the same measuring point in both forward and backward directions among all the measurement points.	iengin meassuring unit
5	Repeatability	Holding the dial test indicator (lever type) with its contact point parallel with the top face of the measuring stage, move the contact point quickly and slowly five times at a desired position within the measuring range and read the indication at each point.	At arbitrary points within the measuring range	Obtain the maximum difference of the five measured values.	Dial test indicator (lever type) Supporting stand
6	Measuring force	Holding the dial test indicator (lever type), move the contact point in the forward and backward directions continuously and gradually, and read the measuring force in the measuring range.	Reference point and end point within the measuring range	Obtain the maximum and the minimum values in reference to the measuring force.	Dial test indicator (lever type) Top pan type spring scale

Maximum permissible error and permissible limits

Maximum permissible error and permissible limits										
Graduation (mm)			0.001/0.002		0.01					
Revolution		1 revolution	Multi-re	volution		Multi-revolution				
Measuring range (mm)		0.3 or less	Over 0.3, up to 0.5	Over 0.5, up to 0.6	0.5 or less	Over 0.5, L1 ≤ 35	up to 1.0 35 < L1	Over 1.0, up to 1.6		
	Measuring range (μm)	4	6	7	6	9	10	16		
Error of indication over a range of	One revolution (µm)	_	5	5	_	-		10		
over a range or	10 scale divisions (µm)	2	2	2	5	5	5	5		
Hysteresis (µm)		3	4	4	4	4	5	5		
Repeatability (µm)		1	1	1	3	3	3	3		
Measuring force (N)	Max.	0.5	0.5	0.5	0.5	0.5	0.5	0.5		
Measuring force (N)	Min	0.01	0.01	0.01	0.01	0.01	0.01	0.01		

Dial Test Indicators and the Cosine Effect

Always minimize the angle between movement directions during use.

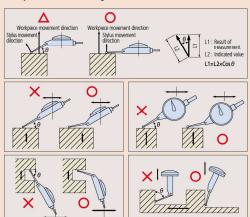

The reading of any indicator will not represent an accurate measurement if its measuring direction is misaligned with the intended direction of measurement (cosine effect). Because the measuring direction of a dial test indicator is at right angles to a line drawn through the contact point and the stylus pivot, this effect can be minimized by setting the stylus to minimize angle θ (as shown in the figures). If necessary, the dial reading can be compensated for the actual θ value by using the table below to give the result of measurement. Result of measurement = indicated value × compensation value

Compensating for a non-zero angle

Angle	Compensation value
10°	0.98
20°	0.94
30°	0.87
40°	0.77
50°	0.64
C00	0.50

Examples

If a 0.002 mm measurement is indicated on the dial at various values of θ , the result of measurements are: For θ =10°, 0.002 mm×0.98=0.00196 mm For θ =20°, 0.002 mm×0.94=0.00188 mm For θ =30°, 0.002 mm×0.87=0.00174 mm

Mitutoyo's Response to Dial Test Indicator (Lever Type) Standard JIS B 7533: 2015

- In the finished product inspection, the accuracy is guaranteed using the horizontal, tilted, vertical type dial indicator with its dial face facing upward; the parallel type with its dial face set in the vertical orientation.
- Standard-attached inspection certificate includes inspection data.
- The calibration result for other than the above postures is available for a fee.
- It is said that, for evaluation of the compatibility to the specifications, the criteria based on JIS B 0641-1 or ISO/TR14253-6 shall be applied.

 Also, it is said that the uncertainty is preferred to be evaluated based on ISO 14253-2 and ISO/IEC Guide 98-3. Therefore, we perform shipping inspection of dial indicators inclusive of the uncertainty of calibration as in the past.

